

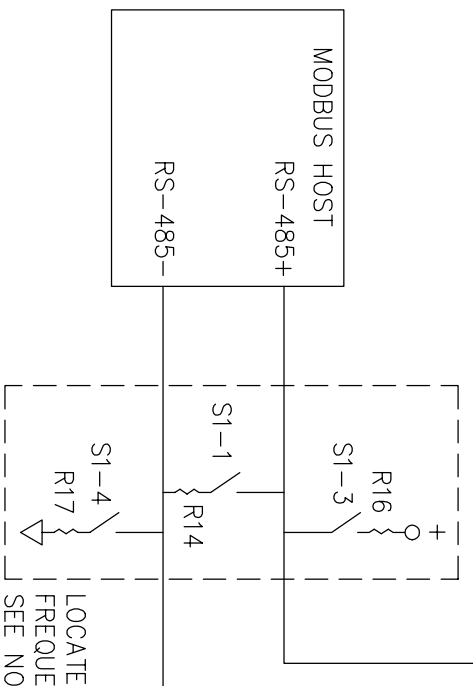


- NOTES:
1. MUST HAVE FREQUENCY BOARD P/N 2000-00047-000 AND PROCESSOR BOARD P/N 2000-00018-001B.
 2. MUST HAVE EPROM SOFTWARE REVISION 4.41 OR GREATER
 3. S1 SWITCHES ALL "OFF" AND S2 SWITCHES ALL "ON" ARE THE DEFAULT POSITIONS
 4. A 100 OHM TERMINATION RESISTOR CAN BE ADDED BY TURNING ON SWITCH S1-1
 5. 620 OHM PULL-UP AND PULL-DOWN RESISTORS CAN BE ADDED BY TURNING ON SWITCH S1-3 AND S1-4 RESPECTIVELY

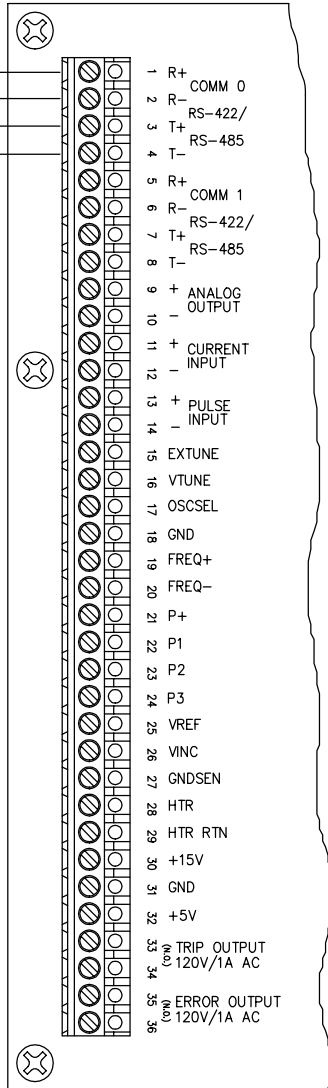

LOCATED ON FREQUENCY BOARD SEE NOTES 3, 4 & 5

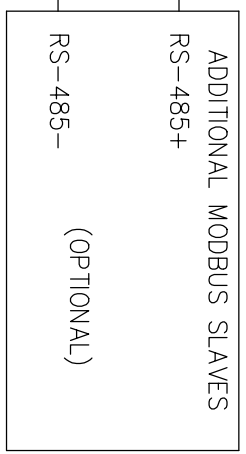

PHASE DYNAMICS, INC
 RICHARDSON, TEXAS

MODBUS WIRING DIAGRAM
 RS-485 COMMO & HART

DATE: 06/08/06
 SIZE: 11x17
 C 0070-00259-000
 REV: © PHASE DYNAMICS, INC.

